


Installation Instructions

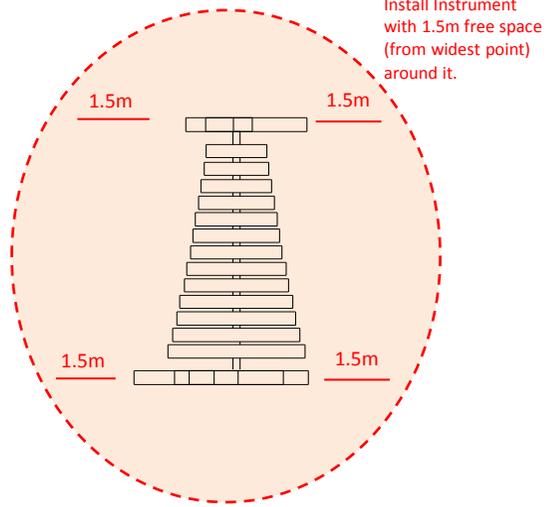

1. Assemble Akadinda frame comprising 2x 'X'-shaped legs and 1x horizontal beam. (See **Assembly Guide**). Cover 8 holes on horizontal beam using **4x30mm caps (1.1)**



Ground Fixed
Akadinda
Page 1 of 2



2. Locate M8x80mm eye bolts through pre drilled holes using flat washers on both sides of the timber to prevent the fixing pulling into the timber. Secure in place with **M8 nyloc nuts**, cover 4 holes in ends using **4x30mm caps (1.3)**

Instrument Components:

-  M10 Wedge Nut X2
-  M10 x30 SS Washer X2
-  M8x25 SS Washer X8
-  Eye Straps X2
-  M8 Lock Nut X4
-  Pin Torx 25 Driver Bit X1
-  M10x130 Bolt X2
-  5x40mm Secure Screw X4
-  Black Caps X8
-  5x70mm Screw X4




3. Place Akadinda in desired location and mark 4 holes for excavation.

4. Excavate holes to min depth 150mm according to required height for intended players. Hole depth guide below.

Height to centre of notes:
KS0 3-5 500mm Depth 400mm
KS1 5-7 650mm Depth 250mm
KS2 7-11 750mm Depth 150mm
Adult 900mm Surface Mounted

5. Locate legs in holes and check levels prior to concreting in place. Once happy with location and levels, **fill holes using rapid hardening concrete**. Leave to dry according to manufactures guidelines.

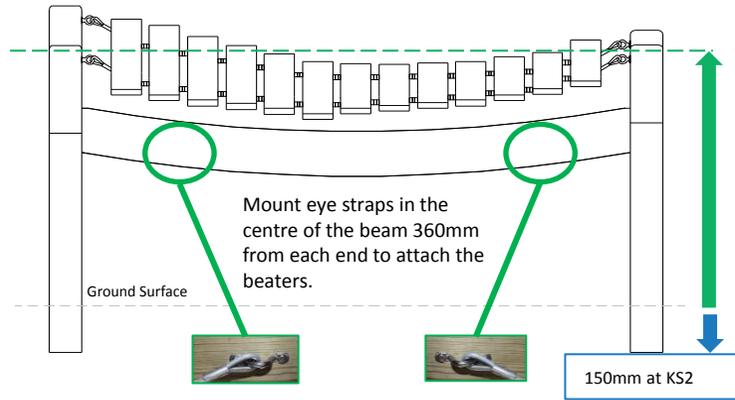

Weight of heaviest part kg (Notes)



Spares available form
percussionplay.co.uk or from your local distributor

48 Kg

Assembly Guide PPAKAD


Ground Fixed
Akadinda
Page 2 of 2




Instrument Components:

-  M10 Wedge Nut X2
-  M10 x30 SS Washer X2
-  M8x25 SS Washer X8
-  Eye Straps X2
-  M8 Lock Nut X4
-  5x40mm Secure Screw X4
-  M10x130 Bolt X2
-  5x70mm Screw X4
-  Black Caps X8

Tools:

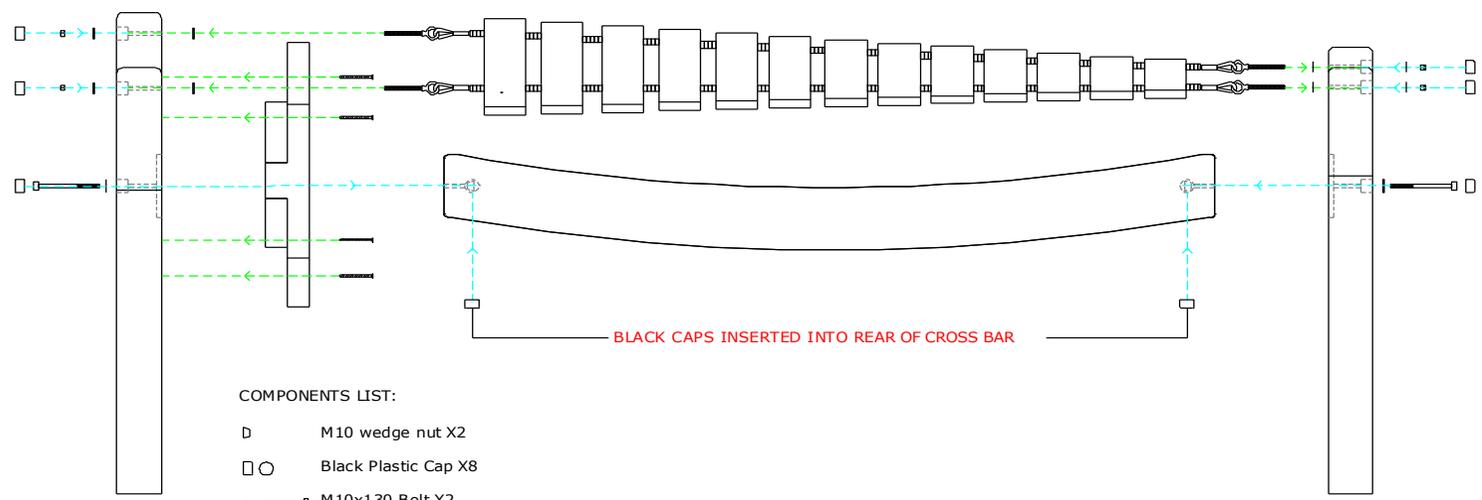 x1
TX 25 Driver Bit


- COMPONENTS LIST:**
-  M10 wedge nut X2
 -  Black Plastic Cap X8
 -  M10x130 Bolt X2
 -  M10x30 washer X2
 -  M8x25 washer X8
 -  5x70 screw X4
 -  M8 Nyloc nut X4

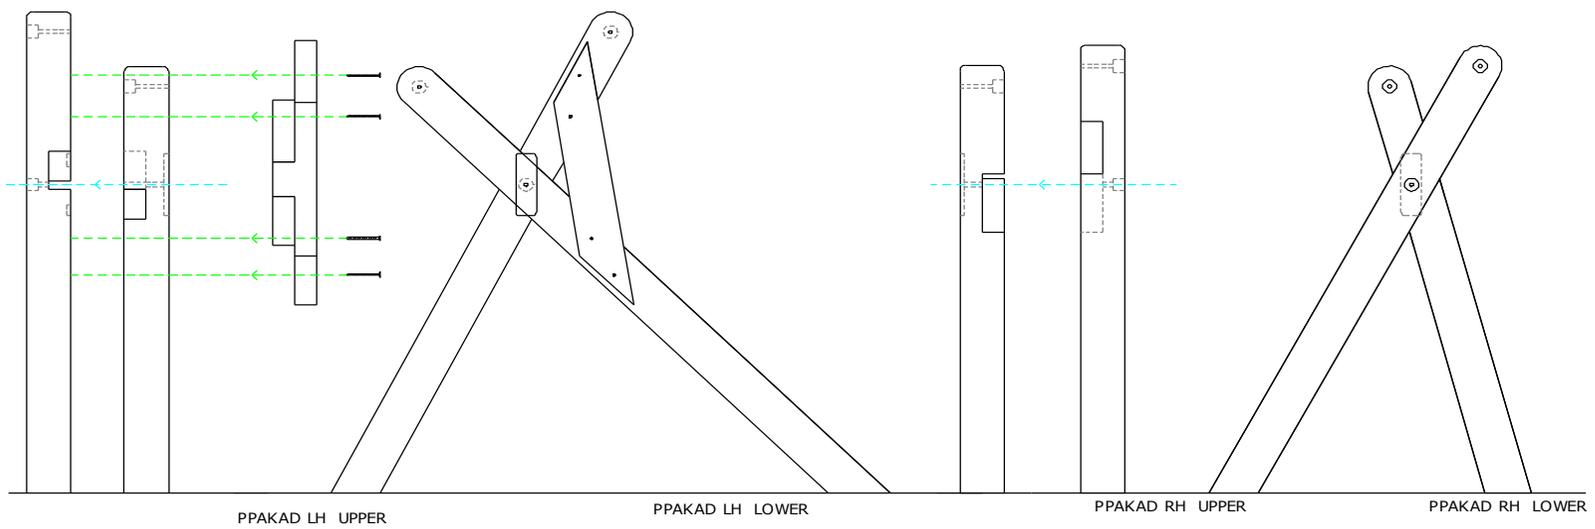


Pair Large Red Beaters X2

Spares available from
percussionplay.co.uk or from your
local distributor

48 Kg