

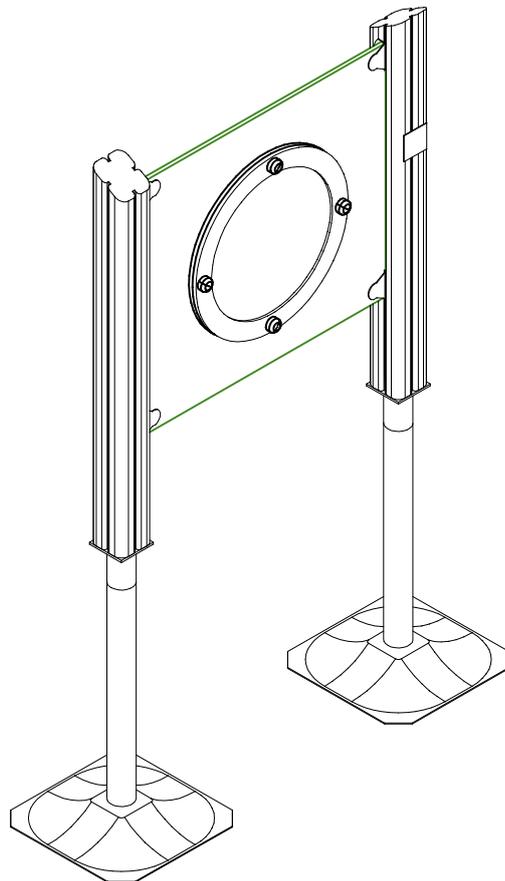
# **LAPPSET®**

## **FINNO**

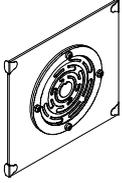
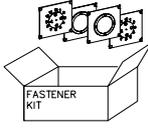
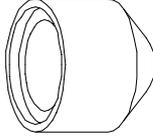
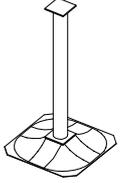
ASENNUSOHJE  
MONTERINGSANSVISNING  
INSTALLATION INSTRUCTION  
AUFBAUANLEITUNG  
NOTICE D'INSTALLATION

DATE: 3.6.2024

### **QFL0033**



DATE: 3.6.2024

702286	PCS	706192-001	PCS	706766-707	PCS	706778	PCS	905104	PCS	909521	PCS
	1		2		1		1		8		2
65x65		93x93x946						M10			
980114	PCS		PCS		PCS		PCS		PCS		PCS
	4										
Ø4x20											
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS
	PCS		PCS		PCS		PCS		PCS		PCS

