


LAPPSET®

FLORA

ASENNUSOHJE
MONTERINGSANSVISNING
INSTALLATION INSTRUCTION
AUFBAUANLEITUNG
NOTICE D'INSTALLATION







DATE: 4.3.2025

QFL0174-1




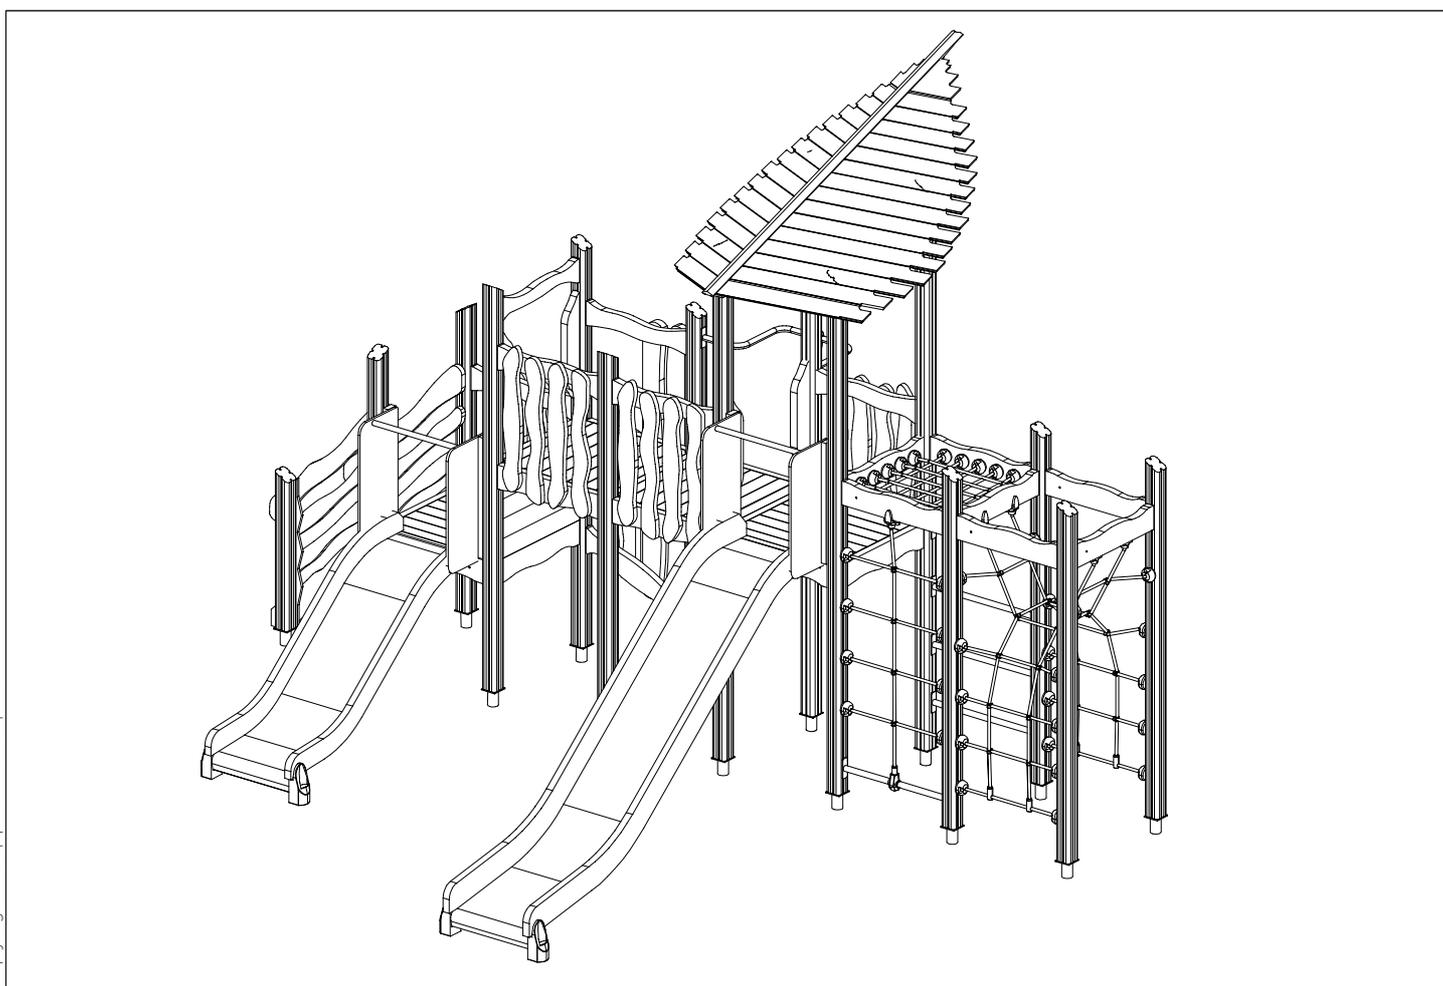




DATE: 4.3.2025

702286 65x65	Pcs 1	705203-001 65x65	Pcs 1	705206-001 93x93x2146	Pcs 4	705211-001 45x145x724	Pcs 15	705214-001 45x145x724	Pcs 1	705217-001 93x93x2250	Pcs 2
705220-001 93x93x2446	Pcs 2	705230-001 93x93x2446	Pcs 4	705236-001 93x93x3138	Pcs 2	705258-001 93x93x3138	Pcs 4	705270-001 93x93x3138	Pcs 1	705308-001 93x93x3138	Pcs 1
705506-001 93x93x3138	Pcs 2	706185-001 93x93x3138	Pcs 1	706192-001 93x93x946	Pcs 2	706234-001 93x93x946	Pcs 1	706480-303 1580x705	Pcs 1	706531 FASTENER KIT	Pcs 2
706543 93x93x3138	Pcs 1	707341-303 1520x705	Pcs 1	707349 93x93x3138	Pcs 1	708746-001 45x120x724	Pcs 5	711369-001 93x93x1846	Pcs 2	711467 93x93x3138	Pcs 1
711544 93x93x3138	Pcs 1	900240 Ø8x70	Pcs 16	901902 30.7x60.9x100	Pcs 2	903093 Ø8x90	Pcs 82	905104 M10	Pcs 56	907694-216 L 704	Pcs 5
909511 90x90x650	Pcs 2	909519 50x380x380	Pcs 2	909521 90x90x650	Pcs 14	980114 Ø4x20	Pcs 4	P14027-001 L 3428	Pcs 2		Pcs
	Pcs		Pcs		Pcs		Pcs		Pcs		Pcs

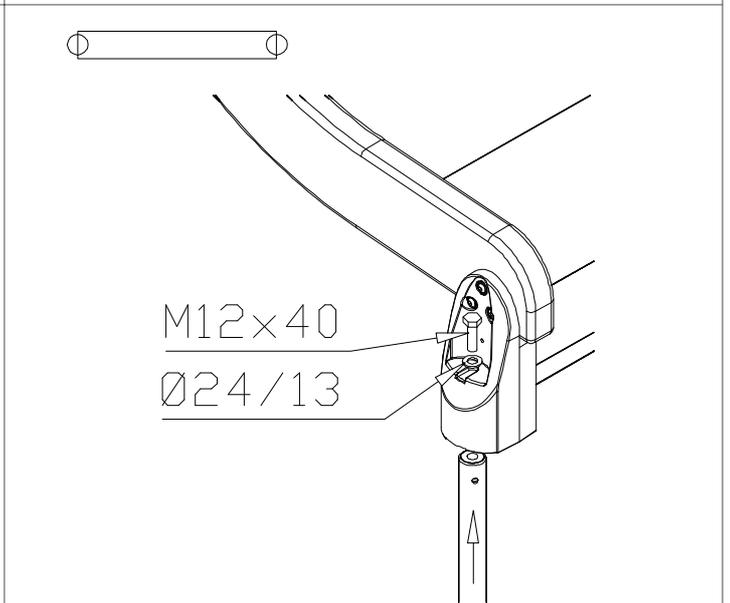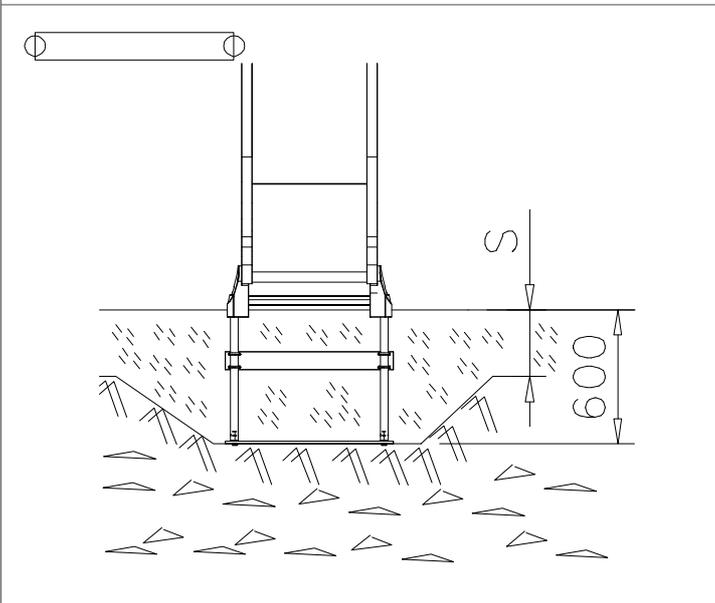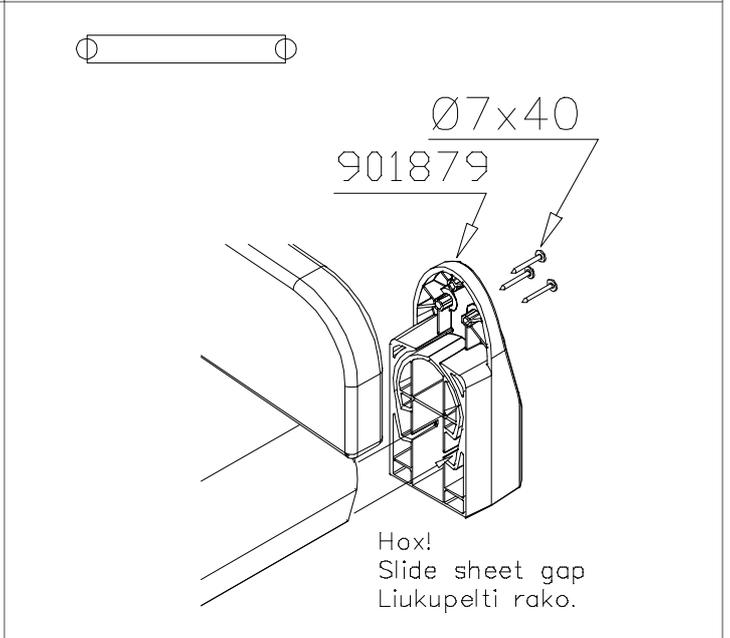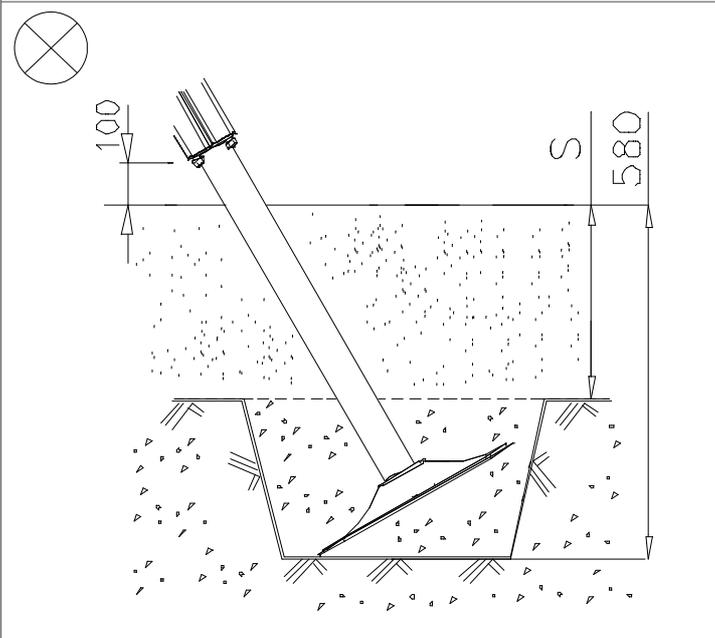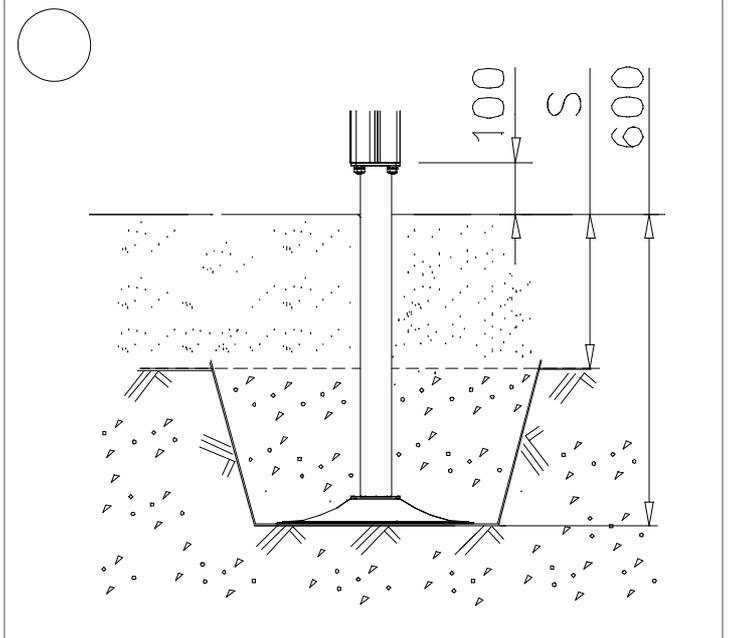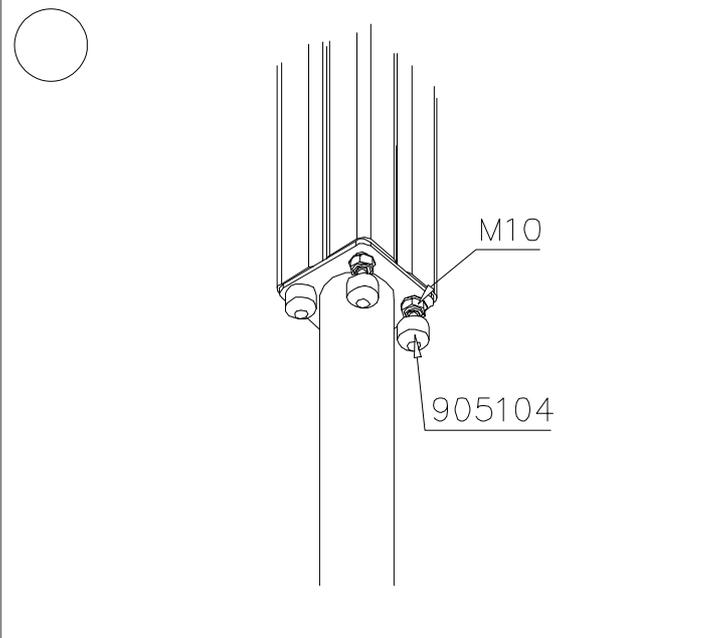


— EN/AS Impact Area 46.1 m²
 - - - Falling Space 48.2 m²
 Max Falling Height 2190 mm

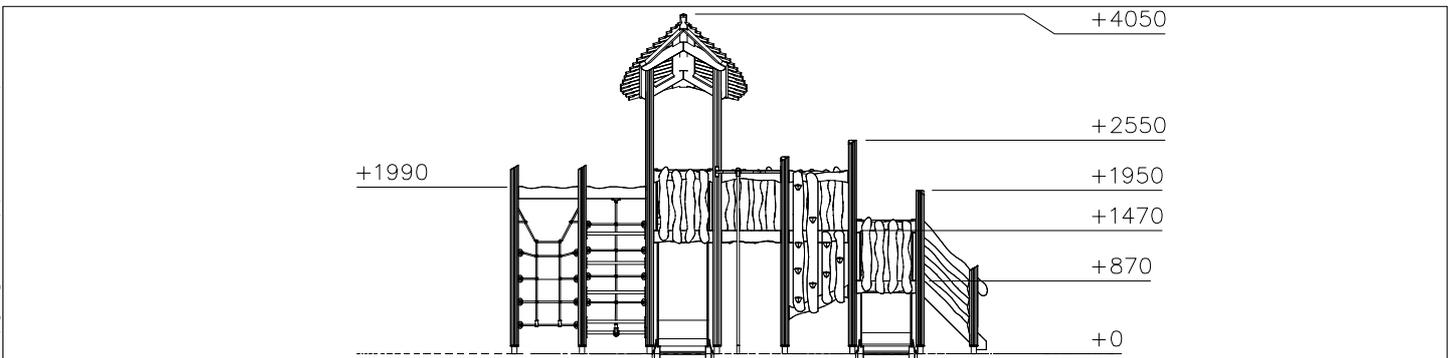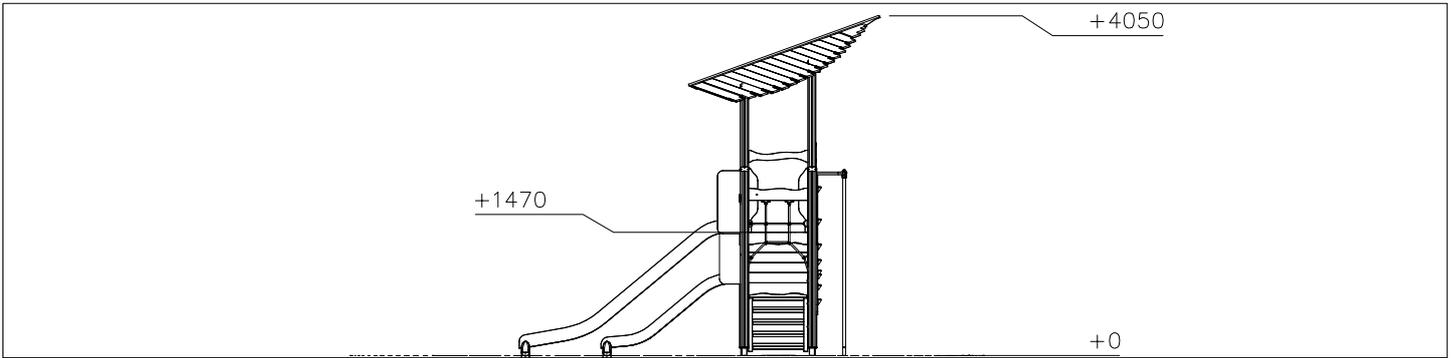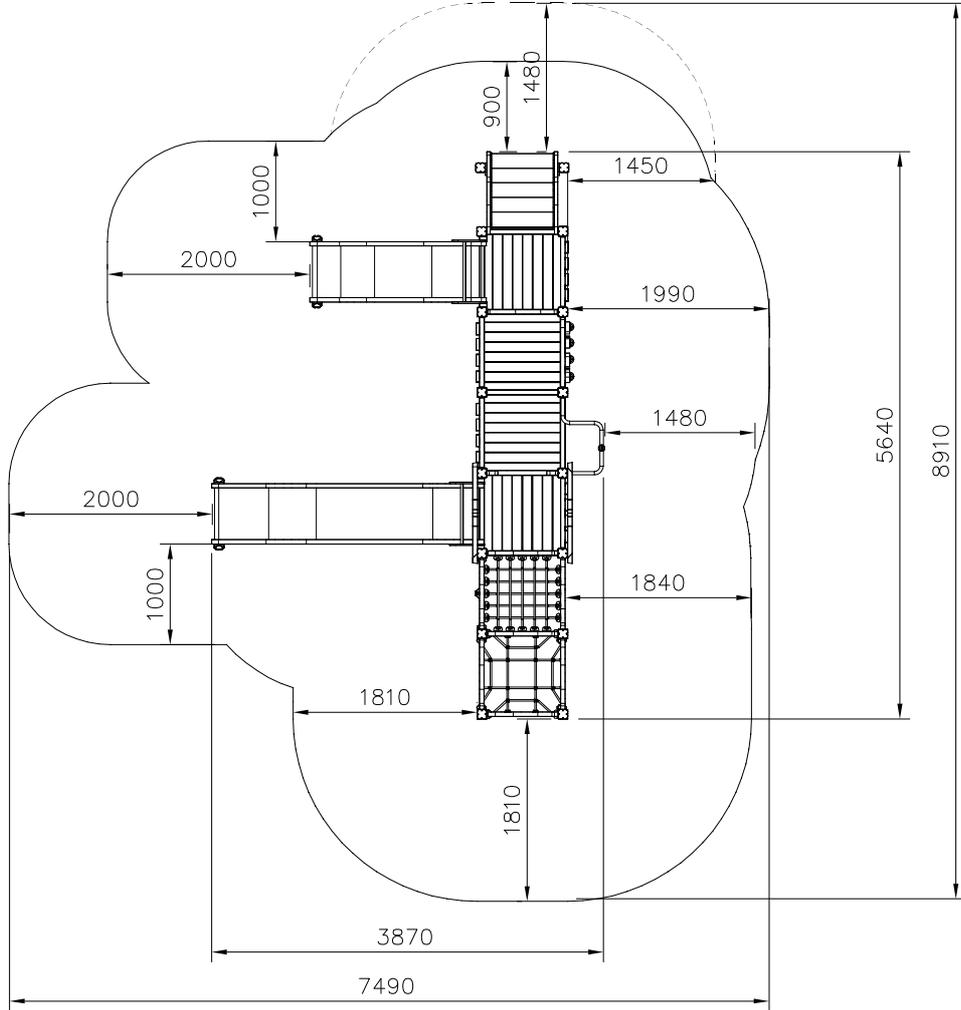


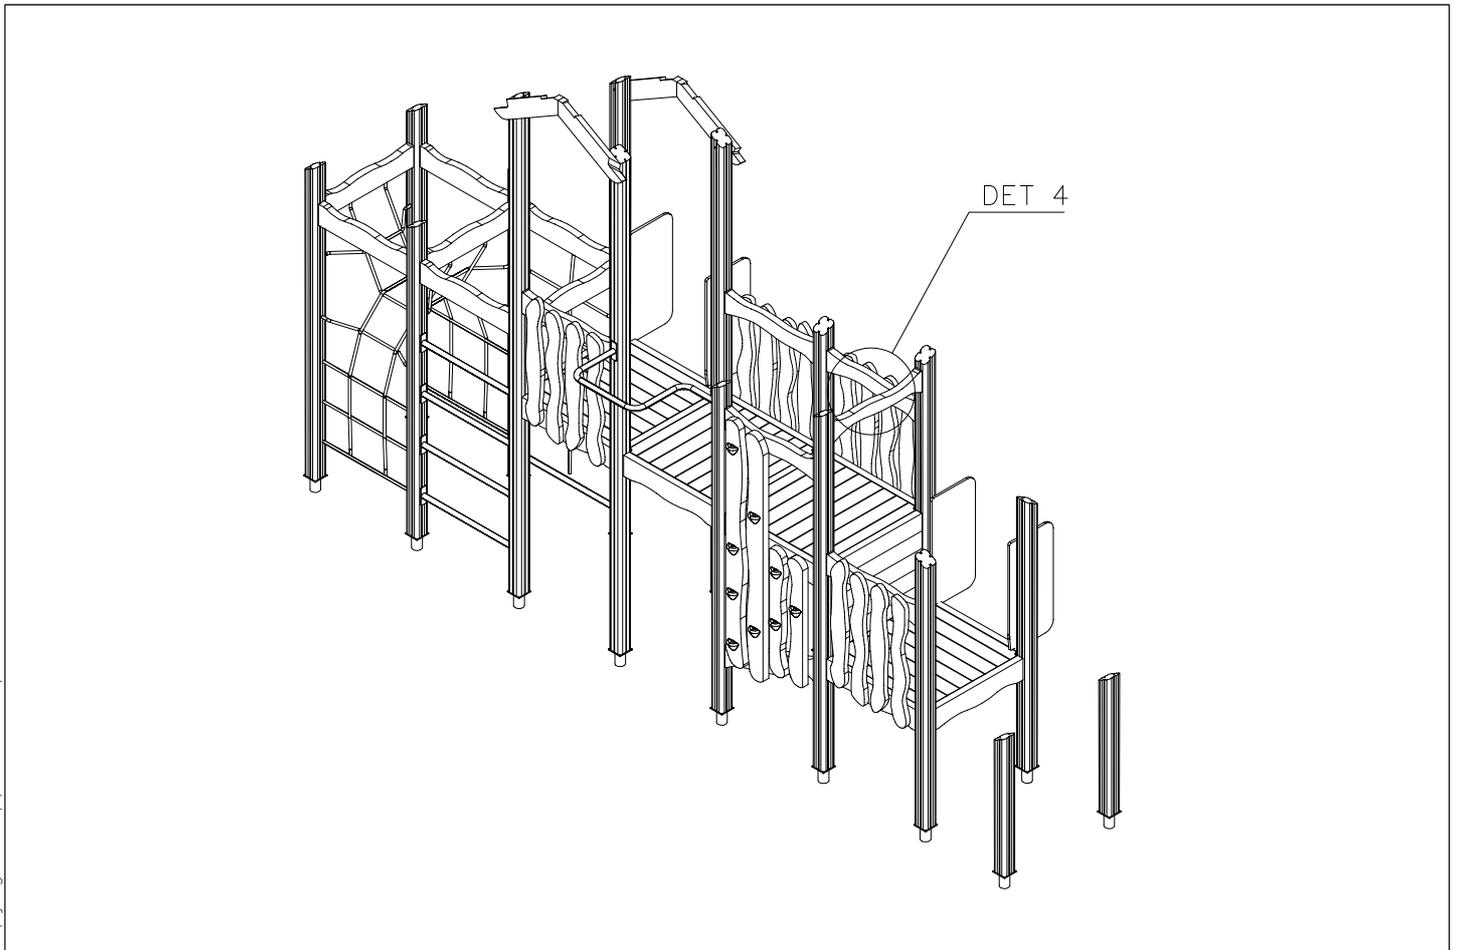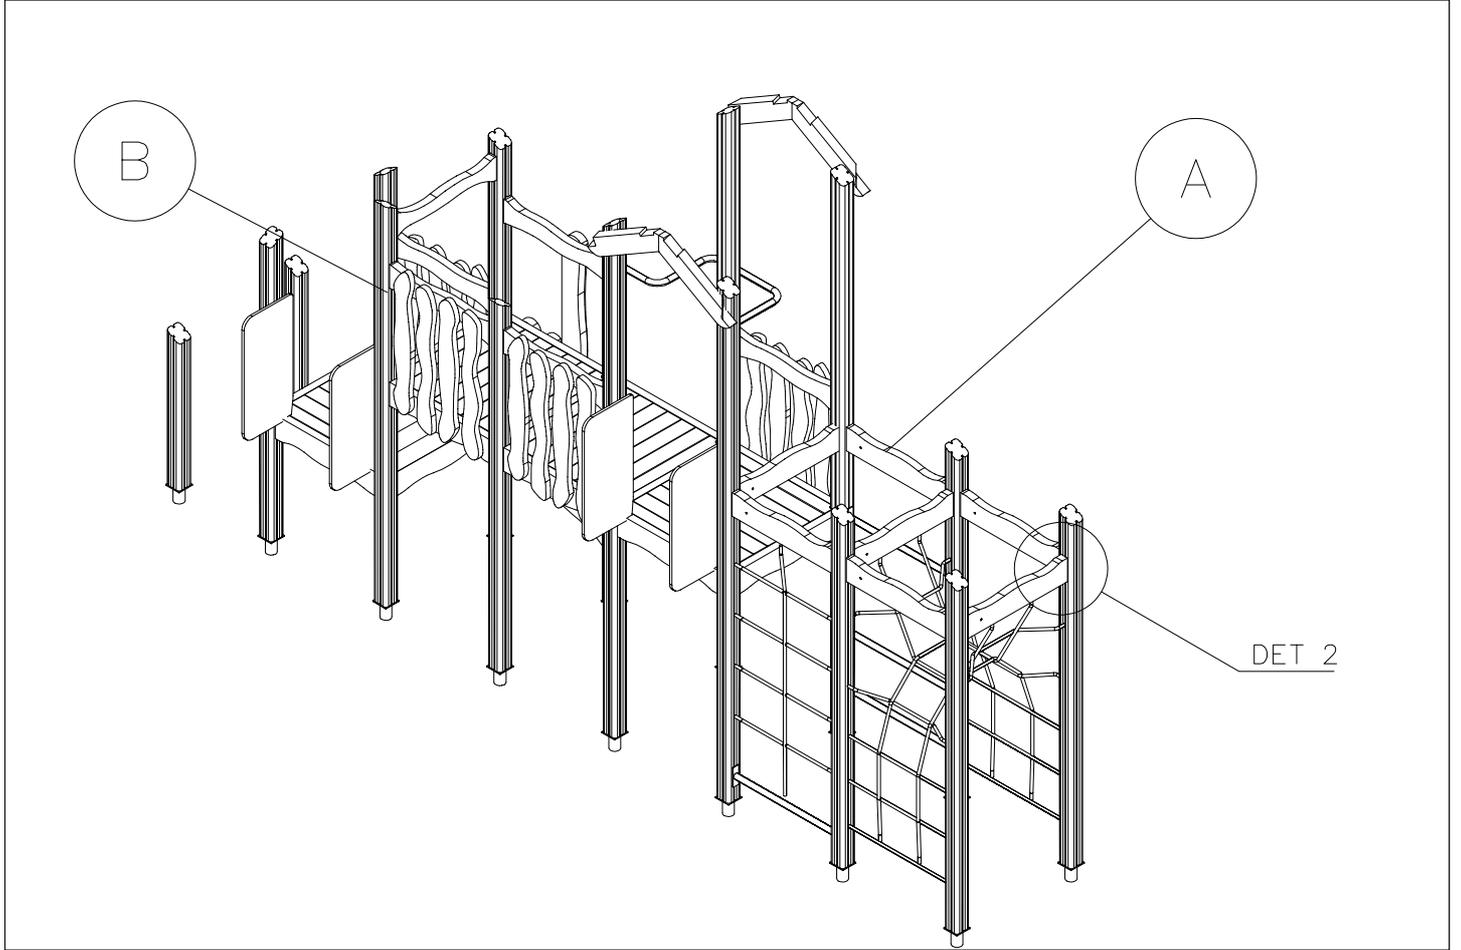


DET 1 =SLIDE

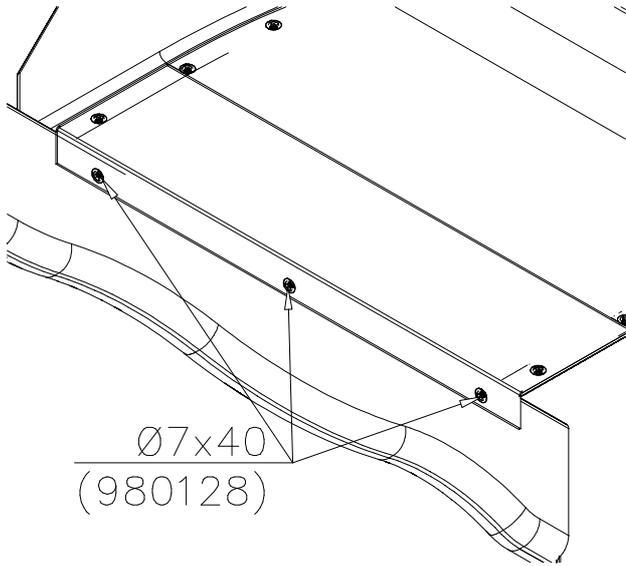


DET 2

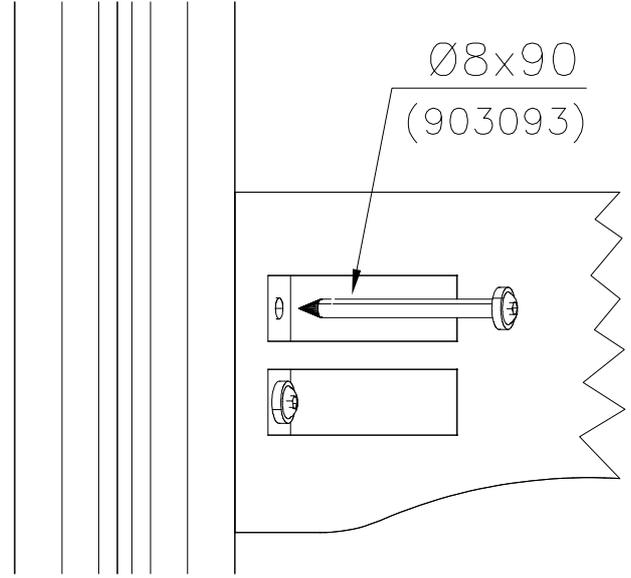

DET 3

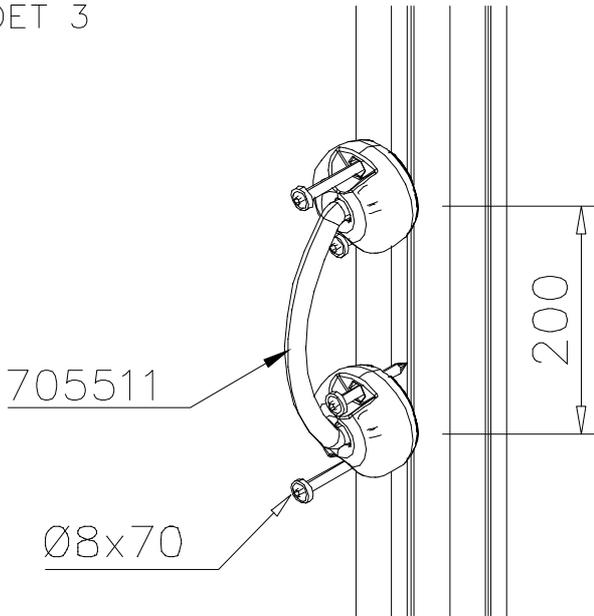



DET 4

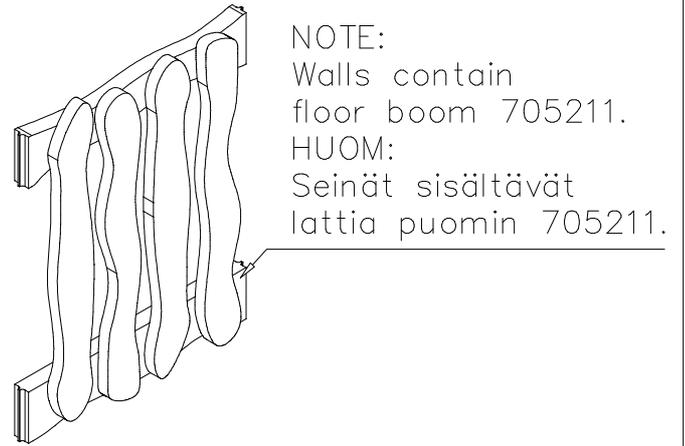

DET 5

DET 6


DATE: 4.3.2025

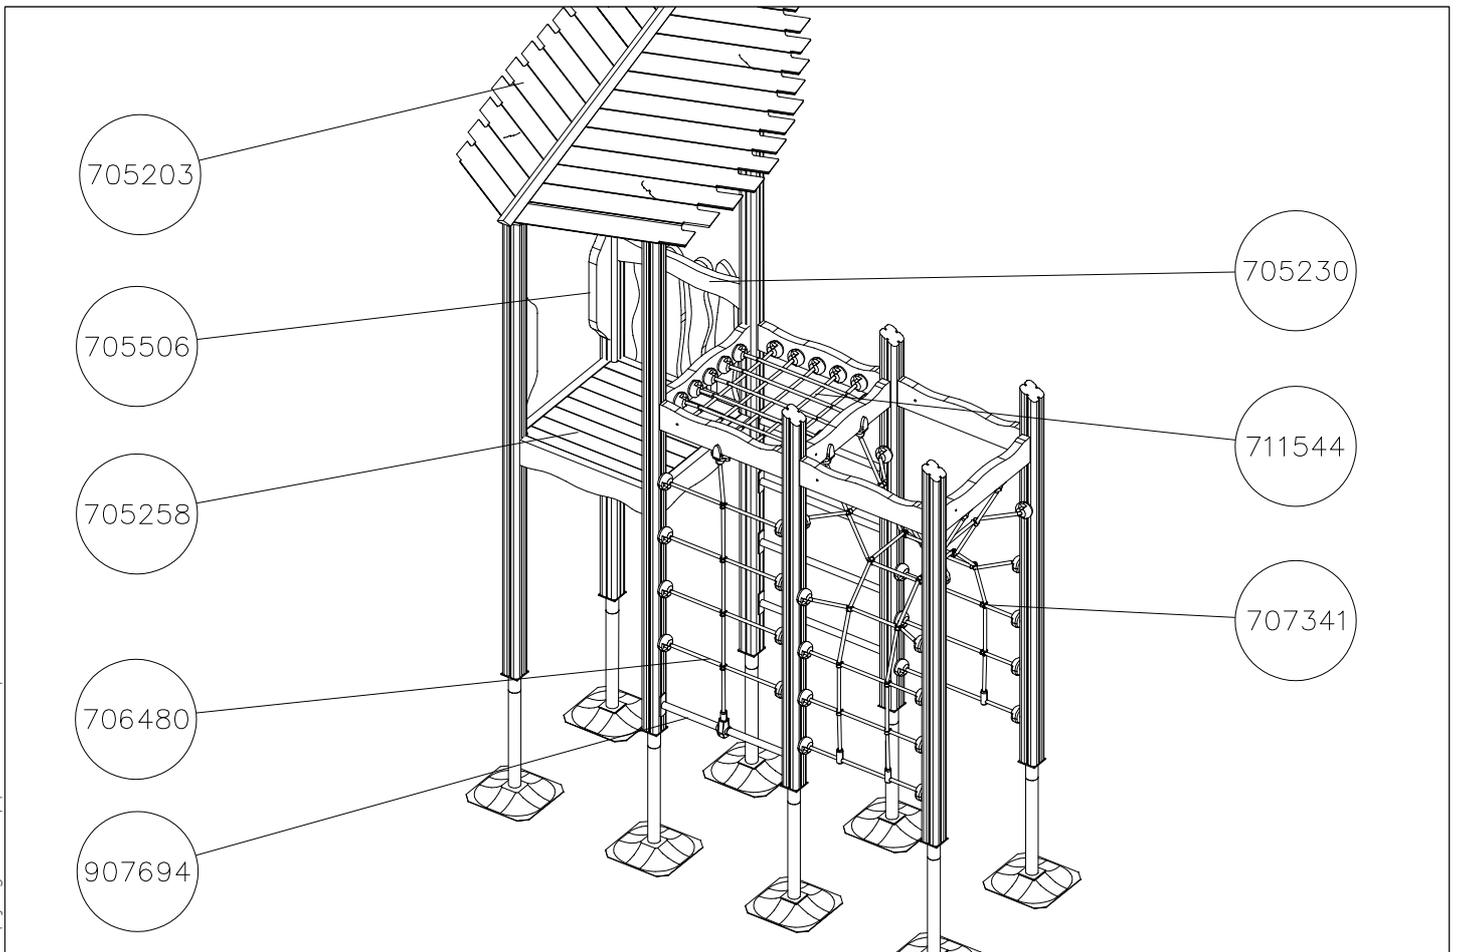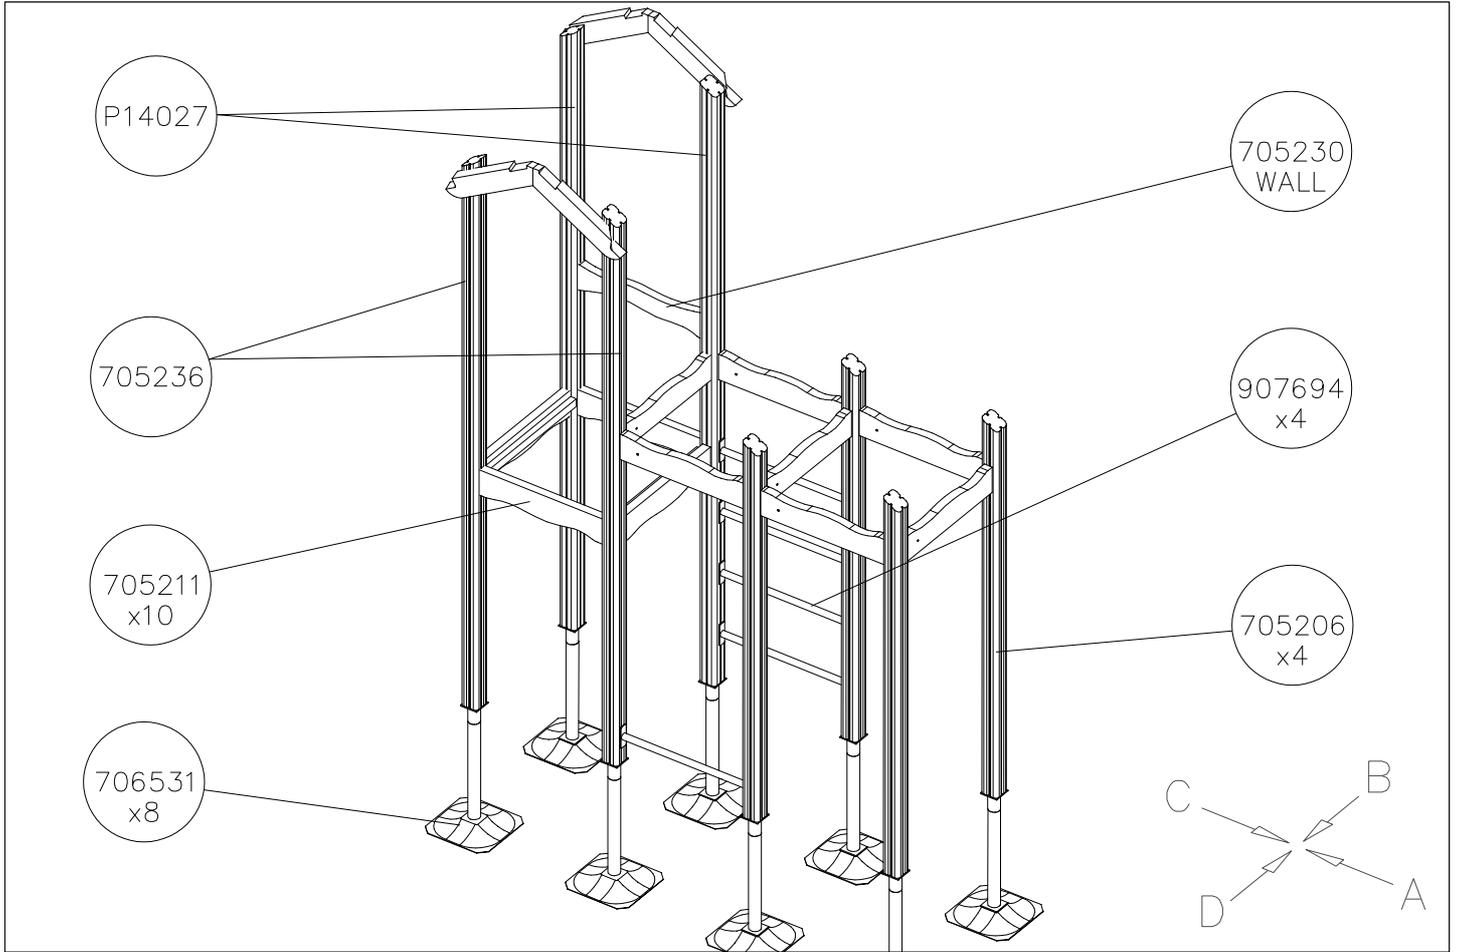


DATE: 4.3.2025

1:50


(A)

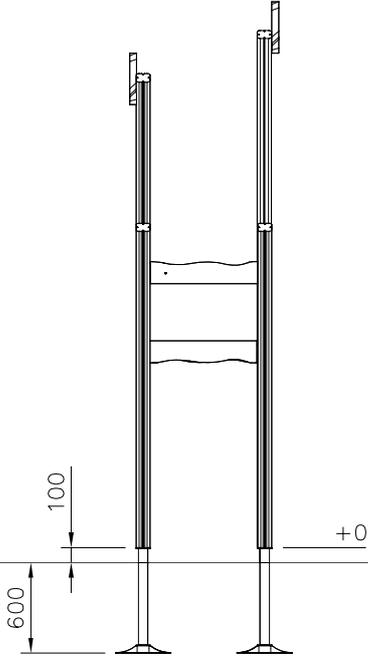


(B)


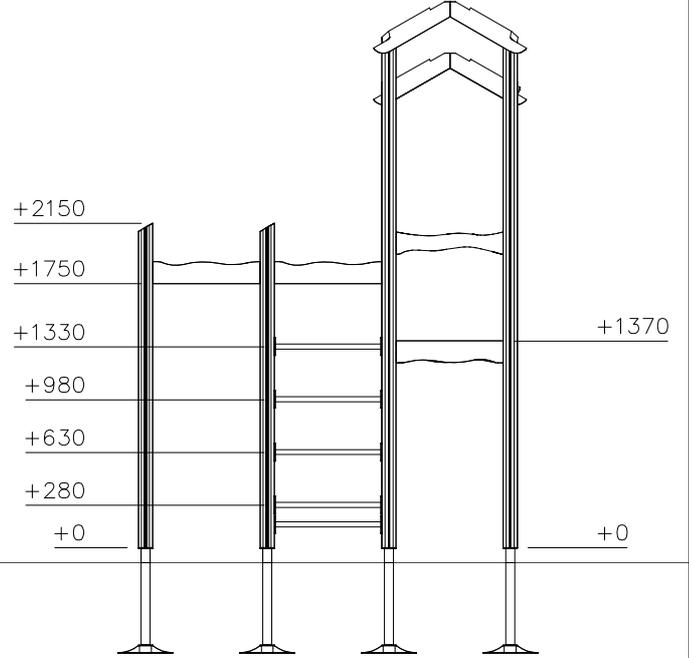


(C)

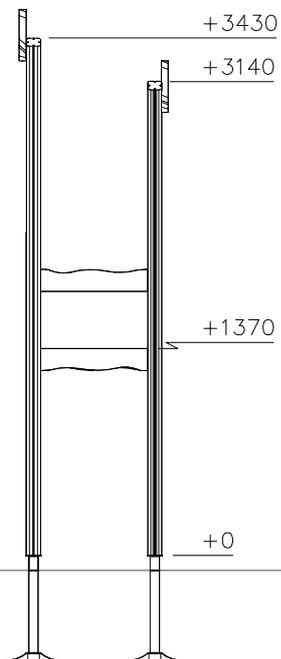

(D)

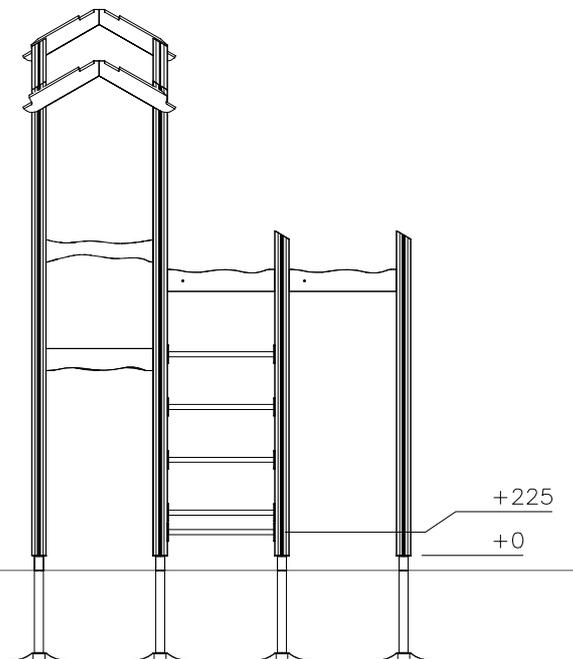


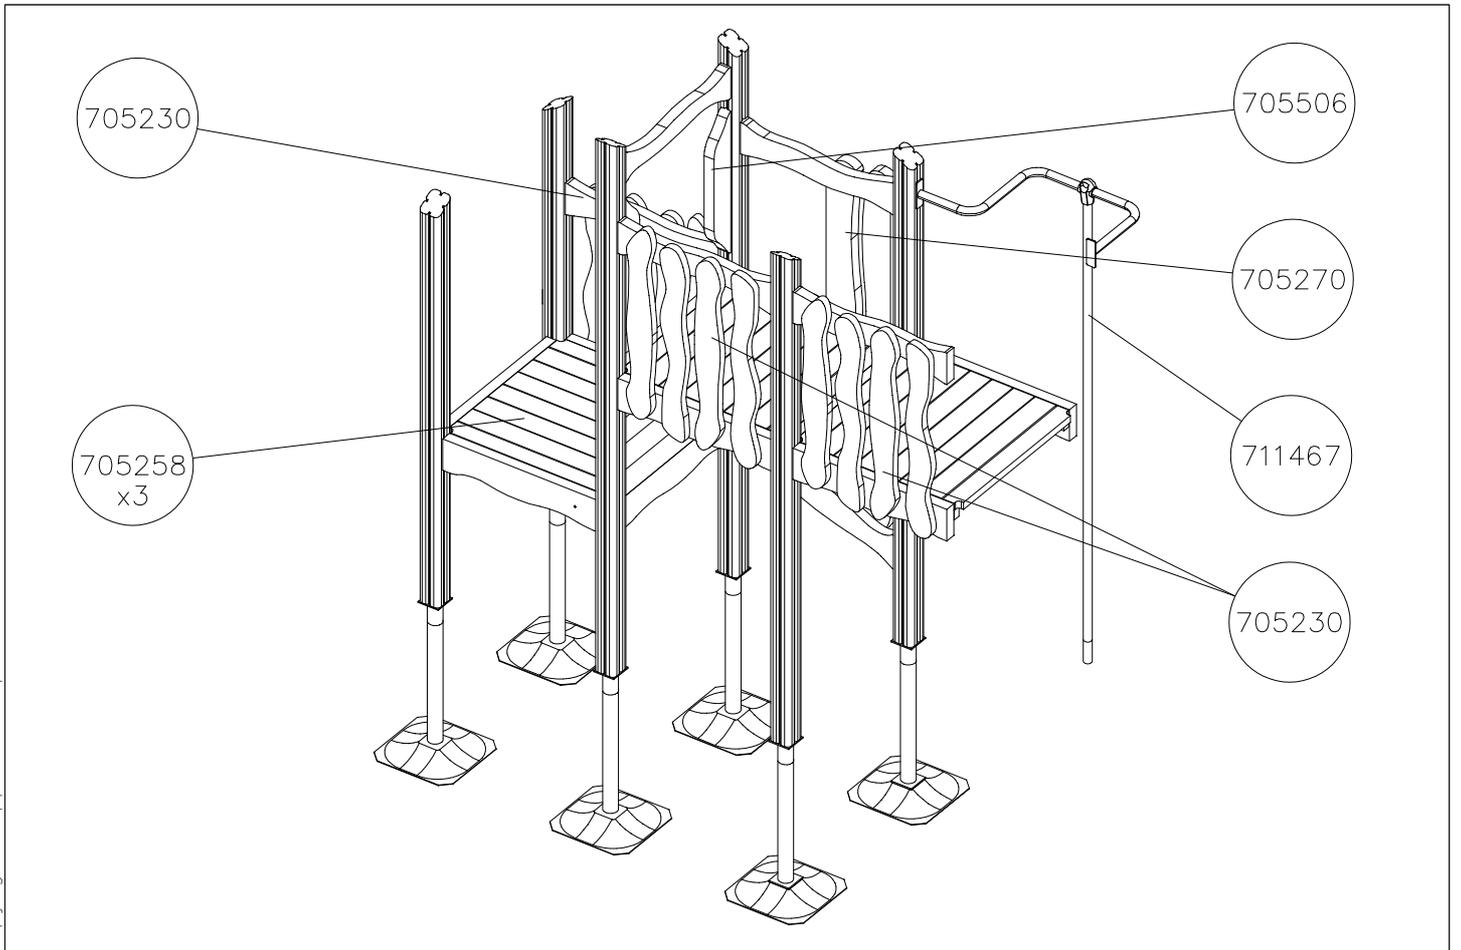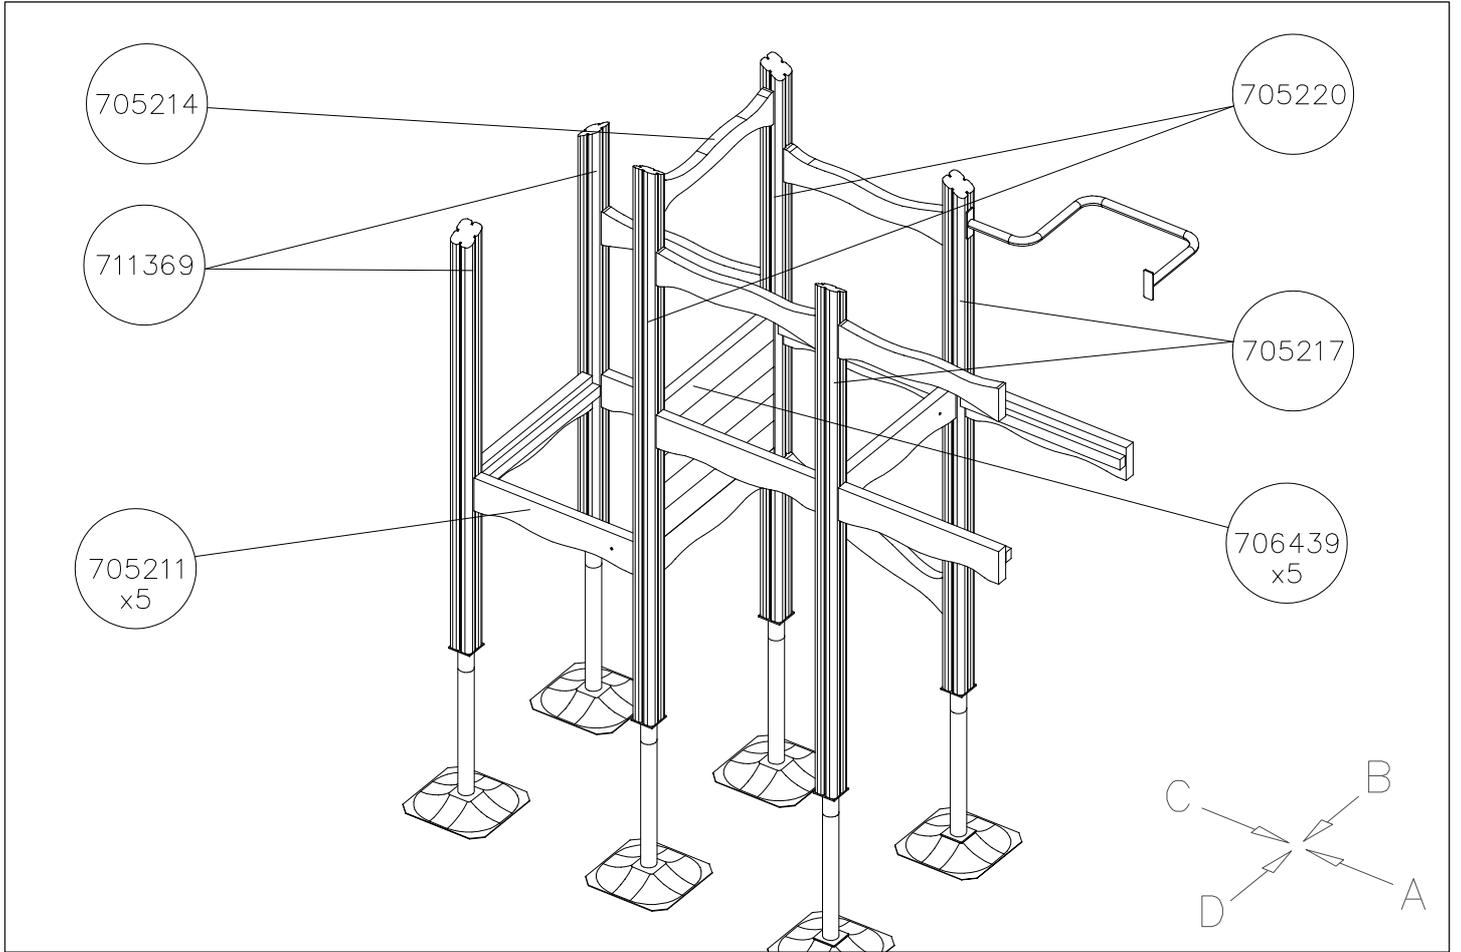


DATE: 4.3.2025

1:50


A

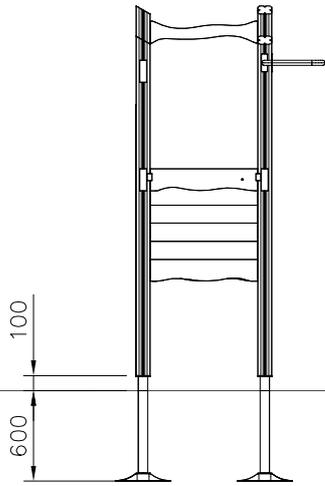

B

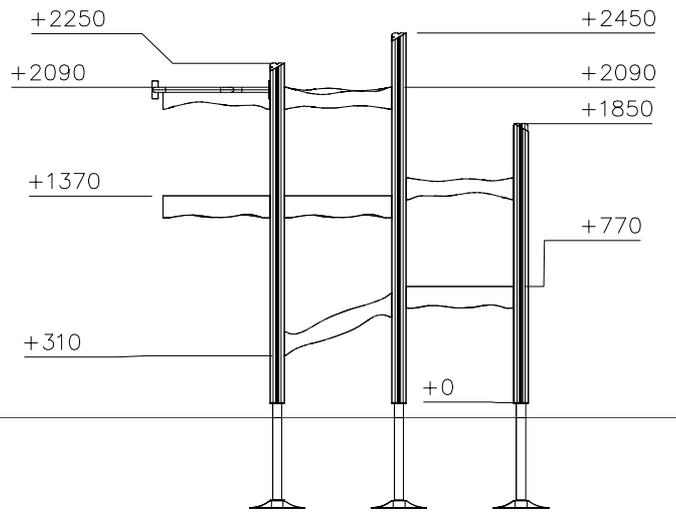

C

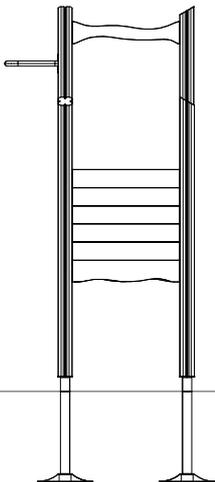

D

